



PREMIUM

OPTION 1
Base appoggio universale
Universal Fit


- (I) **ISTRUZIONI DI MONTAGGIO:**
- (GB) **FITTING INSTRUCTIONS:**
- (F) **INSTRUCTIONS D'INSTALLATION:**
- (D) **MONTAGEANLEITUNG:**
- (E) **INSTRUCCIONES DE INSTALACIÓN:**

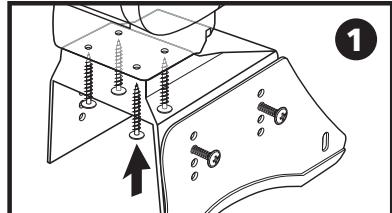


1

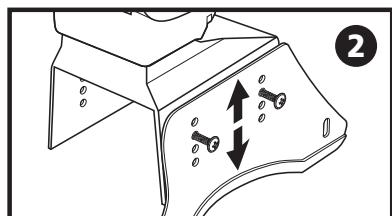


2

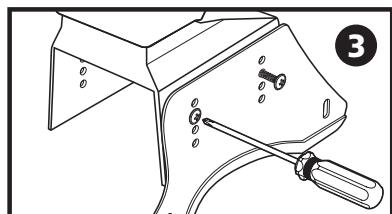

3

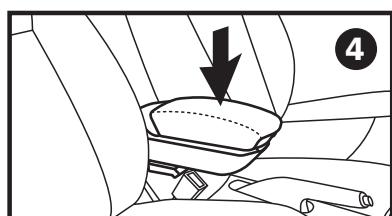

4

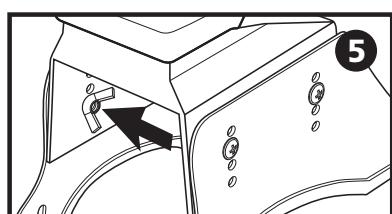

5

- 4 Rondelle
4 Washers
- 4 Viti
4 Bolt
- 4 Viti
4 Bolt
- 4 Rondelle
4 Washers
- 4 Rondelle a farfalla
4 Wing nuts

PREMIUM


OPTION 2
Attacchi su misura
Custom Fit

- (I) VEDI ISTRUZIONI DEL KIT DI MONTAGGIO SPECIFICO
- (GB) SEE SPECIFIC INSTRUCTIONS MANUAL IN THE CUSTOM-FIT BASE
- (F) VOIR LES INSTRUCTIONS POUR LE KIT DE MONTAGE SPÉCIFIQUE
- (D) SIEHE DIE ANWEISUNGEN DES SPEZIFISCHEN ADAPTE KITS
- (E) VÉASE INSTRUCCIONES PARA EL KIT DE MONTAJE ESPECÍFICO


Compatibile per / Compatible for



ALFA ROMEO

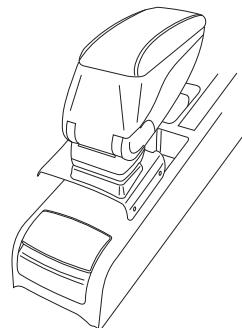


AUDI

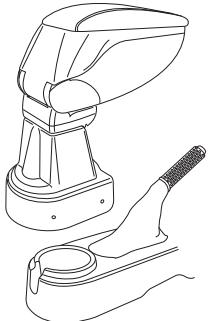


CHEVROLET




CITROEN

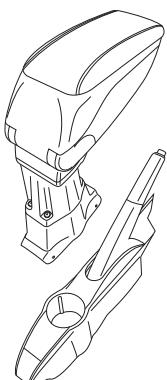


FIAT

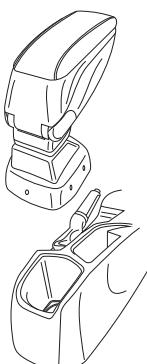


FORD

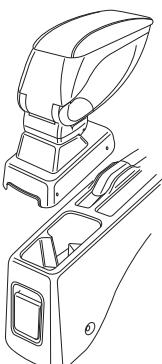


HONDA

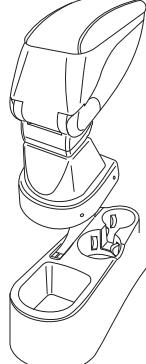


HYUNDAI

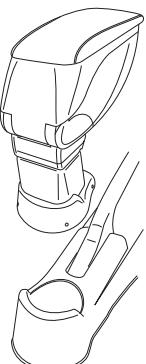


KIA

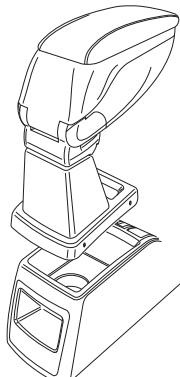


LANCIA

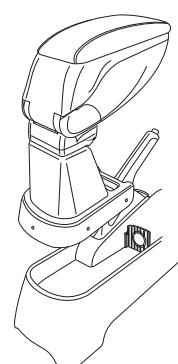


MAZDA

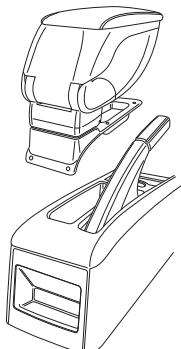


MERCEDES

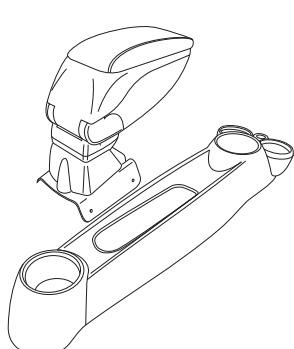


MINI

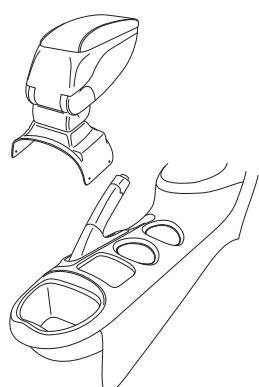


NISSAN

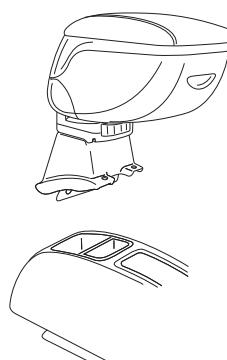


OPEL

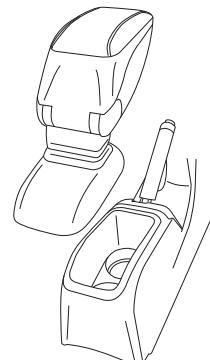


PEUGEOT

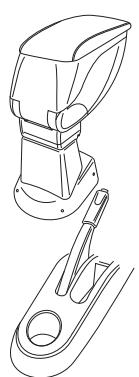

RENAULT

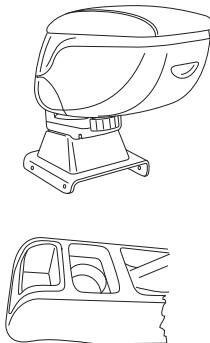


SKODA

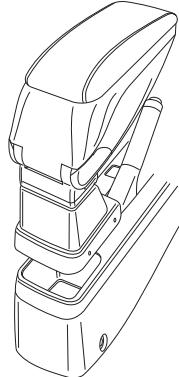

SUZUKI



TOYOTA

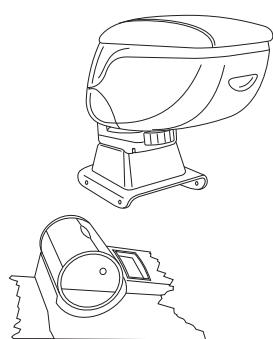

VOLKSWAGEN

